



# REAR AXLE HUB BOLT

## COMPONENTS

for 2WD

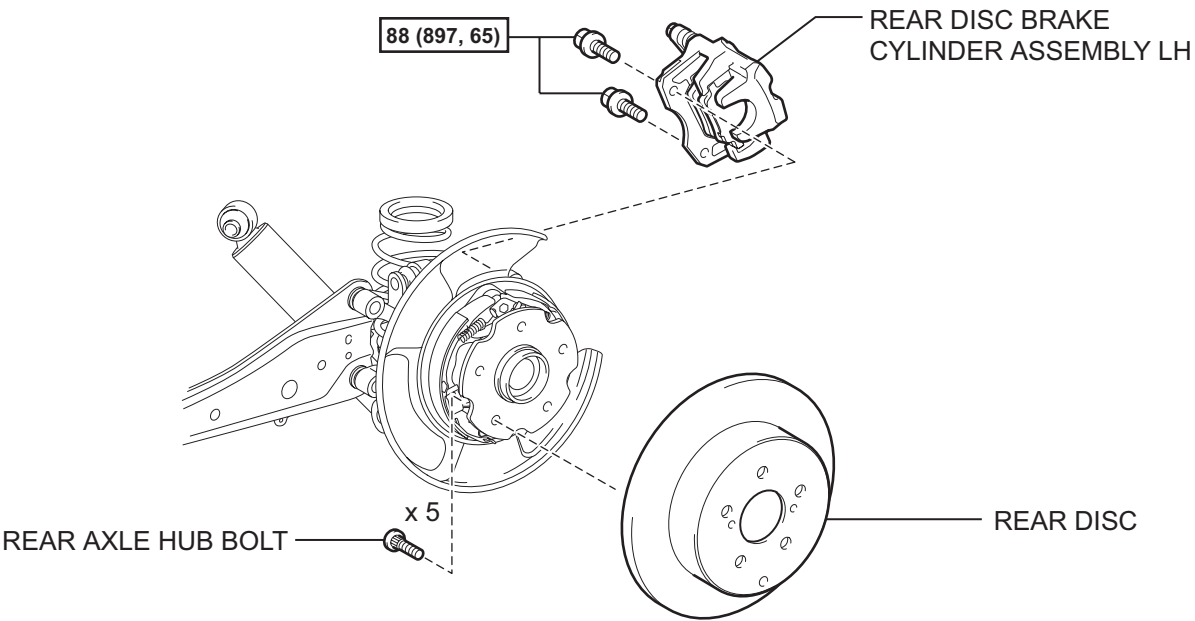

for 4WD

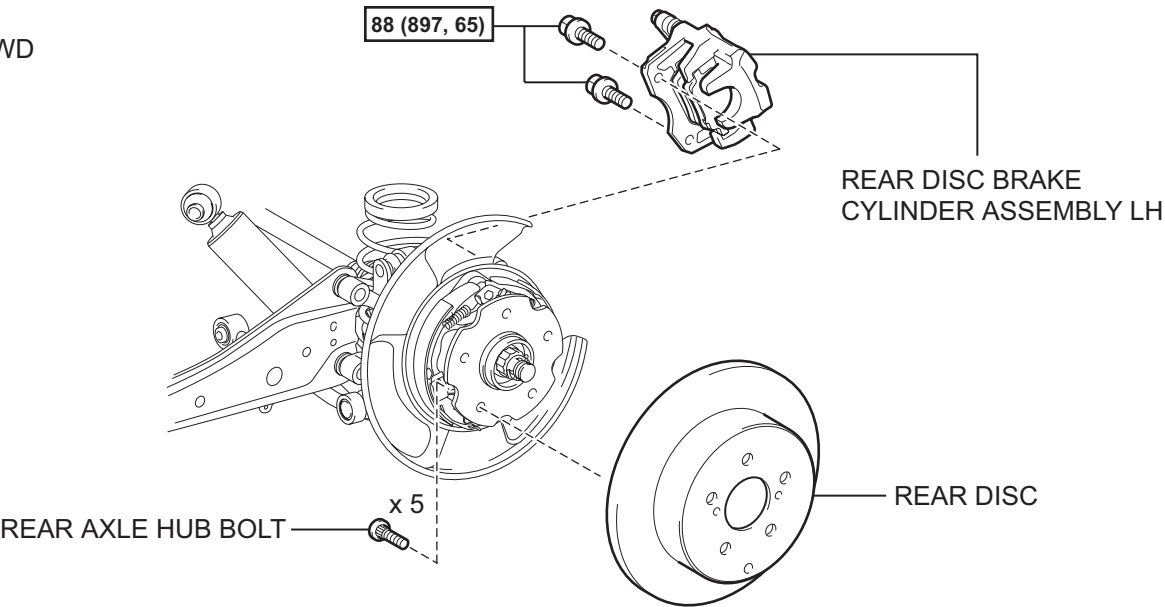

N\*m (kgf\*cm, ft.\*lbf) : Specified torque

## REPLACEMENT



### HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. REMOVE REAR WHEEL
2. REMOVE REAR DISC BRAKE CYLINDER ASSEMBLY LH (See page [BR-55](#))
3. REMOVE REAR DISC (See page [BR-57](#))
4. REMOVE REAR AXLE HUB BOLT

- (a) Using SST and a brass bar or equivalent to hold the axle shaft, remove the hub bolt that needs to be replaced.

**SST 09650-17011**

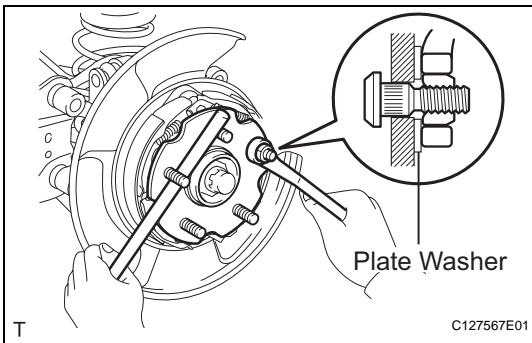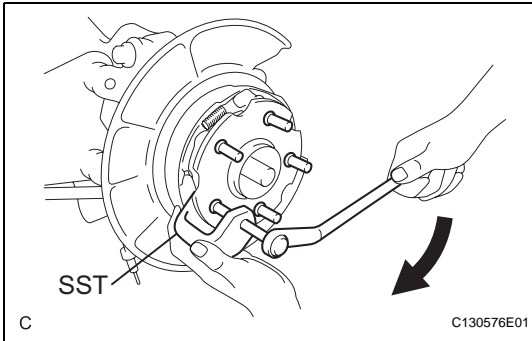

5. INSTALL REAR AXLE HUB BOLT
  - (a) Insert a new hub bolt into the bolt hole. Set a plate washer and nut on the hub bolt end.
  - (b) Using a brass bar or equivalent to hold the rear axle, install the hub bolt by tightening the nut. Then remove the nut and plate washer.
6. INSTALL REAR DISC (See page [BR-58](#))
7. INSTALL REAR DISC BRAKE CYLINDER ASSEMBLY LH (See page [BR-61](#))
8. INSTALL REAR WHEEL  
Torque: 103 N\*m (1,050 kgf\*cm, 76 ft.\*lbf)